



BSA TROOP 137 2010 CHRISTMAS TREE SALE

JOHN DEERE ELECTRICAL LAYOUT

POWER SOURCES

Familiarize yourself with the diagram below. Outlets are on the large JDL sign by the entrance gate and near the arbor across the service road from the sign. These are on the same circuit and easy to overload. If the power cuts off, reset the tripped circuit breaker at the breaker box shown on the layout. The extension cord running from the sign plugs into the awning which is used to power the chain saw, roadside sign and awning lights. The light towers are powered by the generator and should be set up near the tree stands as shown on the layout. The generator is on the far side of the tree storage area. Generator starting instructions are in the manual and attached to the generator.

LAYOUT

